

How to confirm the transceiver's RADIO ID required for new registration of a portable digital node station

Please refer to the following procedure to check the transceiver RADIO ID (5-digit alphanumeric number unique to the transceiver) for new user registration (acquisition of WIRES-X ID number) of WIRES-X portable digital node station.



The transceiver's RADIO ID is a combination of five letters and numbers. Since the RADIO ID is distinguished between uppercase and lowercase letters of the alphabet, please input the RADIO ID displayed on the screen exactly as it is.

- **FT5DR/DE, FT3DR/DE, FT2DR/DE**
 - (1) Press and hold the [**F MENU**] key (FT5D) or the [**DISP**] key (FT3D or FT2D) to open the setup menu.
 - (2) Touch [**GM**].
 - (3) Touch [**2 RADIO ID CHECK**].
The RADIO ID is displayed.
- **FTM-510DR/DE or FTM-500DR/DE**
 - (1) Press and hold the **FUNC** knob to open the setup menu.
 - (2) Rotate **FUNC** knob to select "**62 RADIO ID**".
The RADIO ID is displayed at the bottom of the screen.
- **FTM-400XDR/DE or FTM-400DR/DE**
 - (1) Press and hold the [**DISP(SETUP)**] key to open the setup menu.
 - (2) Touch [**GM**].
 - (3) Touch [**3 RADIO ID CHECK**].
The RADIO ID is displayed.
- **FTM-300DR/DE**
 - (1) Press and hold the [**F(SETUP)**] key to open the setup menu.
 - (2) Rotate **DIAL** to select "**GM**" and then press **DIAL** knob.
 - (3) Rotate **DIAL** to select "**3 RADIO ID CHECK**".
The RADIO ID is displayed at the top of the screen.
- **FTM-200DR/DE**
 - (1) Press and hold the [**F MENU**] key to open the setup menu.
 - (2) Rotate **DIAL** to select "**59 RADIO ID**".
The RADIO ID is displayed at the bottom of the screen.
- **FTM-100DR/DE**
 - (1) Press and hold the [**DISP(SETUP)**] key to open the setup menu.
 - (2) Rotate **DIAL** to select "**6 GM**" and then press [**DISP(SETUP)**] key.
 - (3) Rotate **DIAL** to select "**4 RADIO ID CHECK**" and then press [**DISP(SETUP)**] key.
The RADIO ID is displayed.