


BU-1 *Bluetooth*[®] Adapter Unit

Please be sure to follow these safety precautions.



- Turn the transceiver power off, and disconnect all cables from the transceiver.
- Touch a metal place to discharge any static electricity from your body.

Installation


1. Remove the six screws and the washer securing the Front Panel and then carefully separate the Front Panel from the Rear case.
2. Locate the connector for the **BU-1**. Peel the covering of the double-side tape on the Printed Circuit Board.

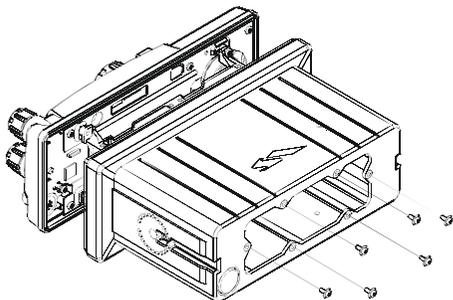

If you use the **GX5500S**, disconnect the wire from the Printed Circuit Board in the Front Panel.

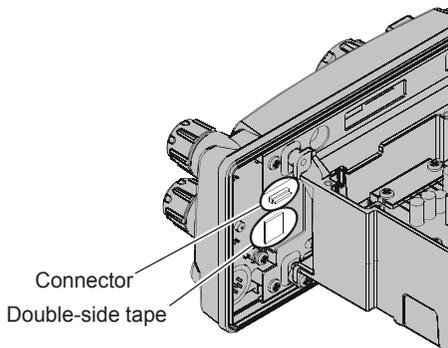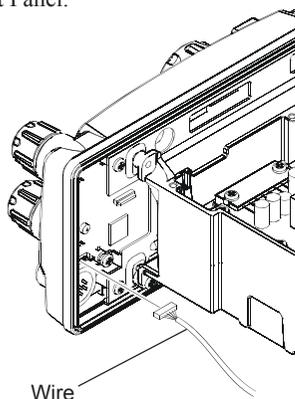

3. Carefully align the connector on the **BU-1** with the connector on the Printed Circuit Board, and gently press the **BU-1** into place.

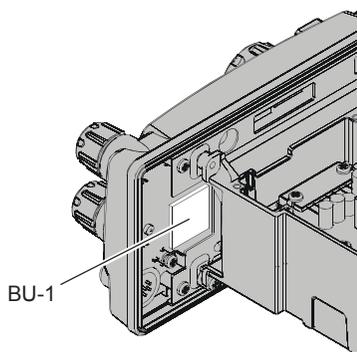

4. Replace the Rear Case, using the screws and washer removed in the first step.
Note: If you used the **GX5500S**, Attach the Wire to the connector on the Printed Circuit Board in the Front Panel.
 - Be certain the Rubber packing on the Rear case is correctly installed, and the rear case adheres and seals properly.
5. Installation is now complete.

Installation of the optional **BU-1 Bluetooth®** Adapter Unit will enable, the **GX5000S/GX5500S** to send/receive voice messages with the optional **BH-1 Bluetooth®** Headset via wireless links.

Pairing

When using the **Bluetooth®** Headset for the first time, the **Bluetooth®** Headset and the **GX5000S/GX5500S** must be paired.

○ Bring the **Bluetooth®** Headset and the **GX5000S/GX5500S** close together when doing Pairing.

1. Press and hold the [**CALL(MENU)**] key until “**Setup Menu**” appears.
2. Turn the CHANNEL selector knob to select “**Bluetooth**” menu, then press the [**ENT**] key. You may change the PIN code, if desired, before continuing with step 3.

- a. Turn the CHANNEL selector knob to select “**Pin Code**”.
- b. Press the [**ENT**] key (The current PIN code appears).
- c. **Using the GX5500S**

To enter a PIN code from the keypad, just press the numbered digits on the keypad in the proper sequence.

Using the GX5000S

- i) Rotate the CHANNEL selector knob to set the first digit of the PIN code.
 - ii) Press the [**ENT**] key to save the first digit of the PIN code and move on to the next place.
 - iii) Repeat the previous steps to complete the PIN code.
- d. If you make a mistake, press the [**ENT**] key to move the incorrect number, then re-enter the correct number.
 - e. Press and hold the [**ENT**] key to save the new setting and exit to the “**Bluetooth**” menu.
3. Turn the CHANNEL selector knob to select “**Pairing**”, then press the [**ENT**] key.
 4. Make sure that the **BH-1** is off.
 5. Press the [**ENT**] key.
 6. Press and hold the POWER switch on the **BH-1** for five seconds, until the **BH-1**'s LED indicator blinks red/blue alternately.
 7. When the **BH-1** is correctly recognized (Requires a 20 to 30 seconds) by the transceiver, the **BH-1**'s LED indicator will blink blue, and “**Pairing Succeeded**” notation will appear on the display of the transceiver.
 8. To exit this menu and return to radio operation mode press the [**16/9**] key.

VOX feature

1. Press and hold the [**CALL(MENU)**] key until “**Setup Menu**” appears.
2. Turn the CHANNEL selector knob to select “**Bluetooth**” menu, then press the [**ENT**] key.
3. Turn the CHANNEL selector knob to select “**Vox Function**”, then press the [**ENT**] key.
4. Turn the CHANNEL selector knob to select the desired VOX function:
OFF: Disable the VOX feature.
HIGH: Activate the VOX feature (VOX gain: High).
LOW: Activate the VOX feature (VOX gain: Low).
5. Press the [**ENT**] key to save the new setting and exit to the “**Bluetooth**” menu.
6. To exit this menu and return to radio operation mode press the [**16/9**] key.

Battery saver

Enable/Disable the battery saver of the optional **BH-1 Bluetooth®** Headset.

1. Press and hold the [**CALL(MENU)**] key until “**Setup Menu**” appears.
2. Turn the CHANNEL selector knob to select “**Bluetooth**” menu, then press the [**ENT**] key.
3. Turn the CHANNEL selector knob to select “**Save Function**”, then press the [**ENT**] key.
4. Turn the CHANNEL selector knob to select “**ON**” or “**OFF**”.
5. Press the [**ENT**] key to save the new setting and exit to the “**Bluetooth**” menu.
6. To exit this menu and return to radio operation mode press the [**16/9**] key.



VERTEX STANDARD CO., LTD.

4-8-8 Nakameguro, Meguro-Ku, Tokyo 153-8644, Japan

VERTEX STANDARD

US Headquarters

10900 Walker Street, Cypress, CA 90630, U.S.A.

