

**1) DSC DISTRESS** (MMSI must be programmed)

- LIFT THE DISTRESS COVER
- PRESS KEY
- PRESS AND HOLD KEY UNTIL SIREN SOUNDS.

**2) PWR**

Press and hold the VOL/PWR knob to turn the radio on or off.

**3) VOL**

Turn to adjust the speaker volume.

**4) SQL**

Adjust to the point where random noise stops from the speaker.  
Further adjustment will cause a loss in reception of wanted signals.

**5) CHANNEL KNOB**

Used to select channels.

**6) 16/9**

Press once to select CH16. For CH9 Press and hold.

**7) WX**

Press to select NOAA weather channels.  
For weather alert, select channel into scan (see 8a).

**8) SCAN - MEM****Adding or removing channels into memory**

- Select the channel using the CHANNEL knob.
- Press and hold the "SCAN" key to program in the channel into memory.

**c. MEM will be shown on the display.**

- To remove a channel, select the channel to be removed (shows MEM). Press and hold the "SCAN" key until MEM is removed from the display

**Start or stopping scan**

- Adjust squelch to point where noise is not heard through speaker.
- Press the "SCAN" key to start or stop scanning.
- During scan if held will switch between scan and P-scan.
- Will show channels in scan memory when held and CHANNEL knob is turned.

**9) H/L**

Switches transmitter power from 1 to 25 Watt output.

**10) DUAL WATCH**

- Select the channel that is to be dual watched to CH16.
  - Press the "DW" key to start Dual Watch function.
  - To disable Dual Watch function, press the "DW" key again.
- Note if DSC SCAN is "ON" in the radio setup mode, the radio will watch between the selected channel, CH16 and CH70.

**11) CALL/SET**

- Press to select DSC call functions.  
Individual Call and All Ships Call
- Press and hold to select Radio Setup Menu or DSC Setup Menu.