

Horizon HX150S

VHF/FM Marine
Handheld Transceiver

Owner's Manual



TABLE OF CONTENTS

GENERAL INFORMATION	1
INTRODUCTION	1
FCC/ INDUSTRY CANADA INFORMATION	1
ACCESSORIES	2
PACKING LIST	2
OPTIONS	2
REPLACEMENT PARTS	2
CONTROLS AND INDICATORS	3
CONTROLS AND CONNECTIONS	3
INDICATORS	6
OPERATION	8
INITIAL PROCEDURE	8
RECEPTION	8
TRANSMISSION	9
TRANSMIT TIME - OUT TIMER (TOT)	10
USA, CANADIAN AND INTERNATIONAL MODES	10
WEATHER CHANNELS	10
SCAN	10
WEATHER ALERT	11
CLEARING THE TRANSCEIVER'S MEMORY	11
EMERGENCY CHANNEL 16	12
CHANNEL 9	12
OPERATING ON CHANNEL 13	12
OPERATING ON CHANNEL 67	12
SIMPLEX/DUPLEX CHANNEL USE	12
BATTERY	13
BATTERY CHARGING	13
BATTERY REMOVAL/INSTALLATION	13
OPERATING BATTERY CHARGE SYSTEM	14
BATTERY SAFETY	15
MAINTENANCE	16
SPECIFICATIONS	17
GENERAL	17
TRANSMITTER	17
RECEIVER	17

1.1 INTRODUCTION

The Standard Communications Corp. (SCC) HX150S is a marine handheld two-way VHF transceiver. The transceiver has 65 channels: 55 marine and 10 weather. The 55 marine channels are switchable to comply with either USA, International, or Canadian regulations. It has an emergency channel 16 which can be immediately selected from any channel by pressing the red **16/9** key. Weather channels can also be accessed immediately by pressing the **WX** key.

The transceiver includes the following features: scanning, weather alert, easy-to-read LCD display, EEPROM memory back-up, low battery indication, and a transmit time-out timer (TOT).

1.2 FCC/ INDUSTRY CANADA INFORMATION

The following data pertaining to the transceiver is necessary to fill out the license application.

FCC Type Accepted	Part 80
Output Power with CNB300 battery	1 watt (Low) and 5 watts (High)
Emission	16K0F3E
Frequency Range	156.025 to 163.275 MHz
FCC Type Number	APV0596
Industry Canada Type Approval	363822181AVP

Additional FCC and Industry Canada data, including licensing requirements, are contained in the companion document titled OWNER'S MANUAL SUPPLEMENT. The document also contains charts for VHF channel assignments, transceiver procedures, maintenance, factory service information, and warranty data.

WARNING!

This transmitter will operate on channels/frequencies that have restricted use in the United States. The channel assignments include frequencies assigned for exclusive use of the U.S. Coast Guard, use in Canada, and use in International waters. Operation in these frequencies without proper authorization is strictly forbidden. For frequencies/channels that are currently available for use in the U.S. without an individual license, please contact the FCC Call Center at 1 - 888 - CALL - FCC.

2.1 PACKING LIST

When unpacking the transceiver, please check for the following contents:

- HX150S Transceiver
- CNB300 Rechargeable battery pack (7.2 V, 600 mAh)
- CWC231 120VAC Wall charger
- CAT150 Flexible Antenna with STUD connector
- Lanyard
- CBT300 Battery Tray kit (Battery tray, Battery lid, Battery clamper)
- Belt Clip
- Owner's Manual
- Owner's Manual Supplement

2.2 OPTIONS

CMC240	DC Charge Cable with 12 V Cigarette Lighter
CMB240	Mobile Bracket
CNB301	Rechargeable Battery Pack (7.2V1100mAh)

2.3 REPLACEMENT PARTS

Flexible Antenna with STUD Connector	CAT150
Rechargeable Battery Pack	CNB300
Belt Clip	365B258012
Lanyard	458C156040
Battery Tray kit	CBT300

NOTE

This section defines each control of the transceiver. For detailed operating instructions refer to section 4 of this manual. Refer to Figure 1 for the location of the following controls, indicators, and connections.

3.1 CONTROLS AND CONNECTIONS**① POWER SWITCH (PWR)**

Turns the transceiver on and off.

Press and hold down this switch for one second or more to turn the power on. Press and hold down this switch for 2 seconds or more to turn the power off .

② VOLUME KEY (VOL)

Activates the volume adjusting mode.

Press this key to activate the volume adjusting mode. Press the **UP**  or **DOWN**  key to adjust the volume.

③ SQUELCH KEY (SQL)

Activates the squelch adjusting mode.

Press this key to activate the squelch adjusting mode. Press the **UP**  or **DOWN**  key to adjust the squelch.

Sets the point at which random noise on the channel does not activate the audio circuits but a received signal does. This point is called “squelch threshold”. Further adjustment of the squelch control will degrade the reception of wanted transmissions.

④ PUSH-TO-TALK (PTT) SWITCH

Activates transmission.

⑤ UP KEY 

Selects the desired channel and adjusts the volume and squelch levels. Each press increases the channel number ,volume level, and squelch level. When held down, the channels increase continuously.

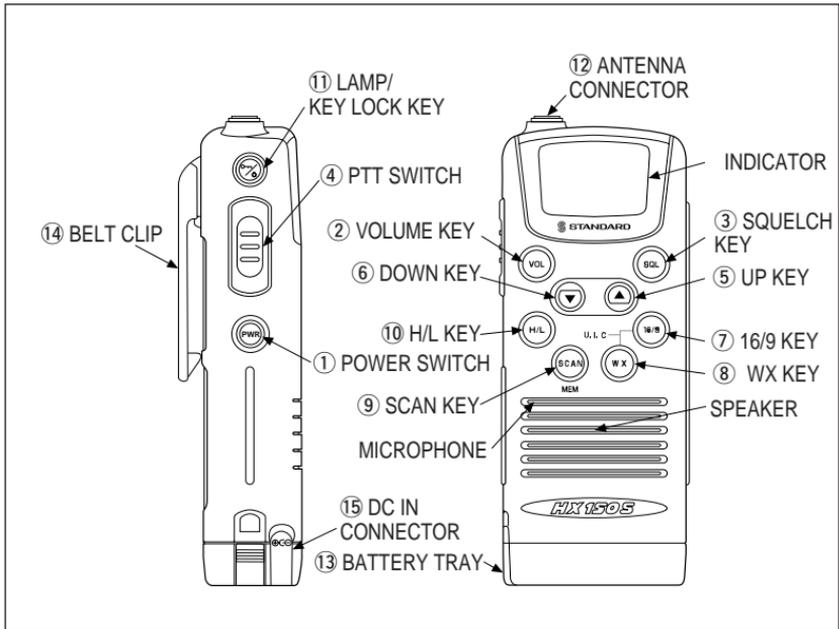


Figure 1. CONTROLS AND CONNECTORS

⑥ DOWN KEY ☒

Selects the desired channel and adjusts the volume and squelch levels. Each press decreases the channel number, volume level and squelch level. When held down, the channels decrease continuously.

⑦ 16/9 KEY

Immediately recalls channel 16 from any channel location. Hold down this key for 1 second or more to recall channel 9. Recalls the previous channel when **16/9** key is pressed again. When the **WX** key is pressed and this key is pressed and held down, the mode toggles between USA, International and Canadian.

⑧ WX KEY

Immediately recalls a weather channel from any channel location. Recalls the previous channel when **WX** key is pressed again.

⑨ SCAN KEY

Starts scanning programmed channels. Stops the transceiver from scanning when pressed during the scan.

⑩ H/L KEY

Toggles between high and low power. To change from low power to high power on Canadian channel 13, USA channel 13 or 67, press and release this key and hold down the PTT switch. High power setting is canceled after the transmitting on these channels.

⑪ Lamp/ Key Lock KEY

Turns the lamp for LCD backlighting on and off.

Hold down this key to lock the displayed channel functions (except for the **H/L**, **PTT**, **PWR** and **Lamp/ Key Lock**  keys) so they are not accidentally changed. The key lock symbol “” appears when the channel is locked. Hold down this key until the key lock symbol disappears to unlock the channel.

⑫ Antenna Connector


Connects the flexible antenna CAT150.

⑬ Battery Tray with Battery Pack

Provides DC power to the transceiver

⑭ Belt Clip

To remove the belt clip, pull the stopper and slide the belt clip upward.

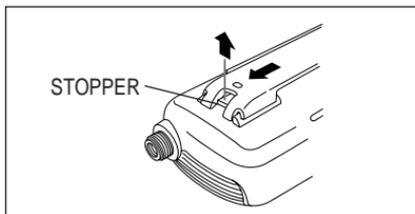

⑮ DC IN Connector

Connects the wall charger CWC231. (see section 5.3)

3.2 INDICATORS



Channel Display

Displays the operating channel in both transmission and reception mode.

A Indicator

A simplex channel in USA or Canadian mode whose counterpart in the International mode is a duplex channel.

TX/ BUSY Indicator

“TX” is in transmitting . “BUSY” is in receiving.

USA/ INTL/ CAN Indicator

The modes of operation for the particular channel. “USA” indicates USA mode. “INTL” indicates International mode and “CAN” indicates Canadian mode.

WX Indicator

A weather channel.

MEM Indicator

The channel is in the transceiver's scan memory.

H/L Indicator

“H” is high power. “L” is low power. Blank is a reception only channel.

SQL/VOL Indicator

“SQL” is squelch adjusting mode. “VOL” is volume adjusting mode.

Key Lock Symbol

A “” appears when the channel is locked. All keys are disabled except for the **H/L**, **PTT**, **PWR** and **Lamp/ Key Lock**  keys.

Low Battery Indicator

A “” appears when the battery capacity is less than 10%.

NOTE

The battery indicator should be used only as a guide in charging the CNB300 battery.

Output Power Indicator

“” is high power. “” is low power.

4.1 INITIAL PROCEDURE

NOTE

Never key the transceiver without an antenna connected. Damage may occur to the transceiver. Do not operate the transceiver while charging.

1. Install the belt clip on the transceiver if desired. To install the belt clip, slide the belt clip into the belt clip holder from the top.
2. Install the battery pack on the transceiver. (see section 5.2)
3. Install the antenna to the transceiver.
4. Hold down the **PWR** switch one second or more to turn the transceiver on.
5. The volume level is set in the middle initially.
6. The squelch level is set at the threshold initially.
7. Hold down the power switch for three seconds or more to turn the power off.

4.2 RECEPTION

1. Hold down the **PWR** switch for one second or more to turn the power on.
2. To change channels, press the  or  key. A slight adjustment of the squelch threshold may be needed. Some channels have a higher noise level than others.

Please refer to the Owner's Manual Supplement for a complete listing of all USA, International and Canadian VHF Marine channels and their use.

3. Press the **VOL** key to activate the volume adjusting mode. Press the  or  key to set the desired volume level. The volume adjusting mode is turned off in about 5 seconds automatically. To turn off the volume adjusting mode immediately, press the **VOL** key again.
4. Select a channel that has no signal being received (no one is transmitting on the channel) and only noise is heard.
5. Press the **SQL** key, then press the  key and stop immediately after the noise disappears. This condition is known as the "Squelch Threshold". If the  key is pressed beyond this level, weak signals may not be received. No noise and no signal can be heard until a signal is received that exceeds the squelch threshold. The SQUELCH ADJUSTMENT MODE automatically turns off in about 5 seconds. To turn off the SQUELCH ADJUSTMENT MODE immediately, press the **SQL** key.

6. Press the  key to turn on the lamp. The lamp automatically turns off in about 5 seconds. To turn off the lamp immediately, press the  key again.
7. To lock the channel in the operating mode, so it is not accidentally changed, hold down the  key for about 2 seconds. This locks all the front panel controls except the **H/L**, **PTT**, **PWR** and  key. Key lock symbol “” appears on the display to indicate that the channel is locked. Hold down the  key for about 2 seconds to unlock the channel. Key lock symbol “” disappears from display.
8. When a message is received, “BUSY” appears on the LCD to indicate that the channel is busy.

4.3 TRANSMISSION

1. Perform steps 1 through 5 of RECEPTION.
2. Before transmitting, monitor the channel and make sure it is clear.
THIS IS AN FCC REQUIREMENT!
3. For communications over short distances, press the **H/L** key until “L” is displayed on the LCD. This indicates low power, approximately 1 watt.

NOTE

Transmitting with 1 watt prolongs battery life. Low power (1 watt) should be selected whenever possible.

4. If low power is not effective, select high power by pressing the **H/L** key until “H” is displayed.
5. When receiving a signal, wait until the signal disappears before transmitting. The transceiver cannot transmit and receive simultaneously.
6. Press the **PTT** (push - to - talk) switch. “TX” and the output power indicator (■■■■■■■■■ ; high power or ■■■ ; low power) appears on the LCD during transmission.
7. Speak slowly and clearly into the microphone. Hold the microphone about 1/2 to 1 inch away from your mouth.
8. When the transmission is finished, release the **PTT** switch.
9. Refer to the OWNER'S MANUAL SUPPLEMENT for standard transceiver operating procedures.

4.4 TRANSMIT TIME - OUT TIMER (TOT)

When the **PTT** switch is held down, transmission time is limited to 5 minutes. This prevents prolonged unintentional transmissions. About 10 seconds before automatic transmitter shutdown, a warning beep is sounded from the speaker. The transceiver automatically switches to receiving mode, even if the **PTT** switch is held down. Before transmitting again, the **PTT** switch must first be released and pressed again. This time-out timer (TOT) prevents a continuous transmission that would result from an accidentally stuck **PTT** switch.

4.5 USA, CANADIAN AND INTERNATIONAL MODES

1. To change the mode of the transceiver, hold down the **16/9** key and press the **WX** key. The mode changes from USA, to International, to Canadian with each press.
2. "USA" appears on LCD for the USA mode, "INTL" appears for International and "CAN" appears in Canadian mode.
3. Refer to marine channel charts in OWNER'S MANUAL SUPPLEMENT for allocated channels in each mode.

4.6 WEATHER CHANNELS

1. To receive a weather channel, press the **WX** key. The transceiver changes channels to the weather channel.
2. Press the  or  key to change to other weather channels.
3. To exit from the weather channels, press the **WX** key again. The transceiver recalls the previous non-weather channel.

4.7 SCAN

1. Select the desired channel to be scanned using the  or  key.
2. Hold down the **SCAN** key to store the channel into the transceiver's memory. "MEM" is displayed.
3. Repeat steps 1 and 2 for all channels to be scanned.
4. To delete a channel from the transceiver's scan memory, hold down the **SCAN** key again while the memorized channel is displayed. "MEM" disappears.
5. All channels programmed remain in the transceiver's scan memory even if the power is turned off. See section 4.9 to clear all the transceiver's scan memory.

6. Press the **SQL** key. Then press the  or  key until the background noise is eliminated.
7. To start scan, press the **SCAN** key. The scan proceeds from the lowest to the highest programmed channel number and stops on channels when a transmission is received.
8. To stop the scan, press the **SCAN** key again. The transceiver will revert to the last received channel.

4.8 WEATHER ALERT

In the event of extreme weather disturbances such as storms and hurricanes, NOAA (National Oceanic and Atmospheric Administration) sends a weather alert accompanied by a 1050 Hz tone and subsequent weather reports on the weather channels. The transceiver is capable of receiving this alert if the following procedure is performed:

1. Program weather channels into the transceiver's memory for scanning. Follow the same procedure as regular channels under Section 4.7.
2. Press the **SCAN** key to start the scan.
3. The memorized weather channels are scanned along with the regular memorized channels. Scan does not stop for normal weather broadcasts.
4. When an alert is received on a weather channel, scanning stops and the transceiver enters the WEATHER ALERT MODE.
5. When the transceiver is in the WEATHER ALERT MODE, a loud tone is sounded.
6. Press the **WX** key to stop the alert tone and receive voice information on the weather channel.

4.9 CLEARING THE TRANSCEIVER'S MEMORY

To erase all channels from memory:

1. Turn the transceiver off.
2. Hold down the **SCAN** and **WX** keys while turning the transceiver on.

NOTE

The above procedure also resets the microprocessor. Perform this procedure if an operational problem occurs.

4.10 EMERGENCY CHANNEL 16

1. To select the emergency channel from any channel, press the **16/9** key
2. Transmit your emergency signal in the same manner as on regular channels. If you can not contact anyone on channel 16, switch to another channel.
3. See the OWNER'S MANUAL SUPPLEMENT for additional emergency operating practices.
4. To recall the previous channel from 16, press the **16/9** key again.

4.11 CHANNEL 9

Channel 9 is used as a hailing channel for initial, non-emergency contact with other vessels. Hold down the **16/9** key for 1 second or more to select channel 9.

4.12 OPERATING ON CHANNEL 13

Channel 13 is used at docks, bridges and for maneuvering in port. Messages on this channel must concern navigation only, such as meeting and passing in restricted waters.

In emergencies and when approaching blind river bends, high power is allowed. Hold down the **H/L** key to temporarily switch to high power. High power is canceled after transmitting on this channel. High power can only be accessed in USA and Canadian modes.

4.13 OPERATING ON CHANNEL 67

When channel 67 is used for navigational bridge-to-bridge traffic between ships, high power may be used temporarily in the USA mode by holding down the **H/L** key. High power is canceled after transmitting on this channel.

4.14 SIMPLEX/DUPLEX CHANNEL USE

The channels are factory-programmed in accordance with FCC (USA), Industry Canada and International regulations. Mode of operation cannot be altered from simplex to duplex or vice-versa. Simplex or duplex modes are automatically activated, depending on the channel and whether USA, International or Canadian operating modes are selected. Refer to the channel charts in the OWNER'S MANUAL SUPPLEMENT.

CAUTION




To avoid risk of explosion and injury, CNB300 battery pack should only be removed, charged or recharged in non-hazardous environments.

5.1 BATTERY CHARGING

To check the charge status, install the battery and press the **PTT** switch while observing the **LOW BATT** indicator.


The battery charge system (CWC231) supplied with the transceiver recharges a completely discharged CNB300 battery pack in about 12 hours.

Battery pack should not be charged with the supplied battery charge system for longer than 16 hours.

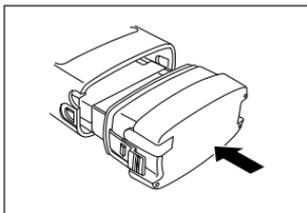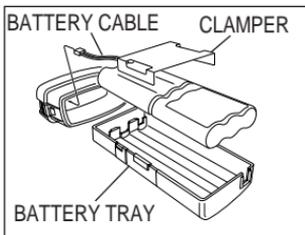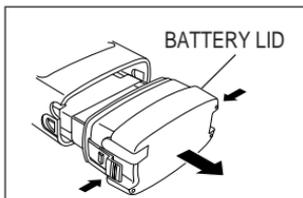5.2 BATTERY REMOVAL/INSTALLATION

1. Turn the transceiver off.
2. To remove the battery tray kit from the transceiver, hold down the battery lock on both sides of the battery lid, and pull the battery tray kit until it slides out.
3. To remove the battery tray from the battery tray lid, pull out the battery cable from the jack of the battery lid.
4. To remove the battery from the battery tray, remove the clammer and pull the battery from the battery tray.
5. Connect the battery cable connector to battery lid's jack. The battery cable must be entered into the battery lid.
6. To install battery tray kit, slide the battery tray into the battery cavity until fully inserted.

To install the “AA” size alkaline cell batteries

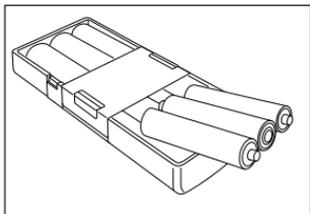

1. Install the battery cells on the bottom side, paying close attention to the battery polarity markings on the tray.
2. Attach the clumper to battery tray.
3. Install the battery cells on the top side.

CAUTION

Confirm the location and polarity of the battery (or alkaline cell) when installing the battery.

NOTE

Remove the battery (or alkaline cells) if the transceiver is not used for long periods.

5.3 OPERATING BATTERY CHARGE SYSTEM

1. Plug the end of CWC231 wall charger to the DC IN connector of the CBT300.
2. Plug the wall charger into a 120 VAC wall outlet.
3. Turn the transceiver off.
4. Insert the transceiver. The indicator lights, and charging begins.
5. Remove the battery pack from charge adapter when charging time has passed.

CAUTION

Never plug a power supply into the CBT300 other than the CWC231.

5.4 BATTERY SAFETY

Battery packs for your transceiver contain cadmium (Ni-Cd) batteries. This type of battery stores a charge powerful enough to be dangerous if misused or abused, especially when removed from the transceiver. Please observe the following precautions:

DO NOT SHORT BATTERY PACK TERMINALS

Shorting the terminals that power the transceiver can cause sparks, severe overheating, burns, and battery cell damage. If the short is of sufficient duration, it is possible to melt battery components. Do not place a loose battery pack on or near metal surfaces of objects such as paper clips, keys, tools, etc. When the battery pack is installed on the transceiver, the terminals that transfer current to the transceiver are not exposed. The terminals that are exposed on the battery pack when it is mounted on the transceiver are charging terminals only and do not constitute a hazard.

DO NOT OVERCHARGE

Do not charge the transceiver for more than 16 hour with the battery charge system. Heat generated by overcharging can shorten battery life and cause other battery pack component failures.

DO NOT INCINERATE

Do not dispose of any Ni-Cd battery in a fire or incinerator. The heat of fire may cause battery cells to explode and/or release dangerous gases.

DISPOSE OF BATTERY PACKS PROPERLY

Ni-Cd batteries must be recycled or disposed of properly. For requirements in your area, check with the dealer from whom you purchased your transceiver. The symbol shown below is a reminder that the battery packs are recyclable.



For preventive maintenance and instructions on obtaining factory service, please refer to the OWNER'S MANUAL SUPPLEMENT. For general troubleshooting, refer to this Troubleshooting Chart.

TROUBLESHOOTING CHART		
SYMPTOM	PROBABLE CAUSE	REMEDY
The SCAN key does not start the scan.	No channels memorized. Squelch is not adjusted.	Use the SCAN key to memorize desired channels into the transceiver's memory. Adjust the squelch to threshold or to the point where noise just disappears. Further adjustment of the squelch control may eliminate incoming signals.
The U/I/C modes do not function.	Proper operation not followed.	Hold down the 16/9 key and press the WX key.
Adjusting the squelch does not eliminate background noise.	Low battery.	Charge battery. Refer to section 5 of this manual.
Cannot change any function.	Lock key is on.	Turn Lock key off.
Lock key does not function.	Proper operation not followed.	Hold down for 1 second.
LED on CWC231 does not light when charging a battery.	Defective battery, CWC231.	Contact your SCC dealer or SCC for servicing.

Performance specifications are nominal, unless otherwise indicated, and are subject to change without notice.

7.1 GENERAL

Frequency Range	156.025 to 163.275 MHz
Channels	All currently allocated USA, Canadian and International channels, plus 10 weather channels.
RF Power Output with CNB300 Battery	5.0 W (high) 1.0 W (low)
Operating Voltage	7.2 VDC
Current Drain:	
Standby	40 mA
Receive	200 mA
Transmit	1.8 A (high power) 0.7 A (low power)
Dimensions	6.30" H x 2.5" W x 1.4" D (160.0 mm x 63.5 mm x 35.6 mm)
Weight	1.0 lb. (0.45 Kg)
FCC Type Acceptance Number	APV0596
Industry Canada Type Approval Number	363822181AVP
Battery Life (5% TX, 5% RX, 90% Standby)	8 hrs. (low) 6 hrs. (high)

7.2 TRANSMITTER

Conducted Spurious Emissions	60 dB (high); 55 dB (low)
Audio Response	within +1/-3 of 6 dB/octave pre-emphasis characteristic from 300 Hz to 3000 Hz
AF Harmonic Distortion	3 %
Hum and Noise	37 dB
Frequency Stability (-20° to +50°C)	± 0.0005 %

7.3 RECEIVER

Sensitivity:	
20 dB Quieting	0.35 μV
12 dB SINAD	0.30 μV
Squelch Sensitivity (Threshold)	0.20 μV
Modulation Acceptance Bandwidth	± 4.5 kHz
Selectivity:	
Spurious and Image Rejection	60 dB
Intermodulation Rejection	60 dB
Audio Response	within +2/-8 of 6 dB/octave de-emphasis
Channel Spacing	25 kHz



Standard Communication Corp.

P.O. Box 92151

Los Angeles, CA 90009-2151

Telephone 310/532-5300

© STANDARD COMMUNICATIONS CORP. 1997

All Rights Reserved

Printed in Japan

MAR 1997

365B851012