

YAESU
The radio

**C4FM/FM 144/430 MHz
DUAL BAND TRANSCEIVER**

FTM-100DR/DE

Instruction Manual
(WIRES-X Edition)

Thank you for purchasing this Yaesu product.

This instruction manual explains information related to the "WIRES-X Function".

For information on basic operation of the transceiver, please refer to the enclosed FTM-100DR/DE operating manual.

Company names and products in this manual are trademarks or registered trademarks of the respective company.


Contents

What is WIRES-X?	3	Deleting imported data	23
Terminology	4	Deleting a file	23
Inputting Characters	7	Listening to audio messages.....	25
Switching the character type.....	7	Listening to emergency information in the local node.....	25
Deleting all input characters	7	Listening to routine messages in local nodes.....	25
Moving the cursor to the left	7	Listening to emergency information on the	
Moving the cursor to the right	7	WIRES-X server (INT NEWS)	26
Deleting the most recently input character	7	Listening to routine messages on the	
Completing input.....	7	WIRES-X server (INT NEWS)	26
Connecting to a Faraway Station Using WIRES-X.....	8	Listening to emergency information in nodes or	
Finding a local node	8	rooms on the Internet.....	27
Connecting in digital mode.....	8	Listening to routine messages in nodes or	
Connecting to a WIRES-X digital node (Recommended) ...	8	rooms on the Internet.....	27
Connecting to the other node ID or the other room ID.....	9	Transmitting messages and images	27
Connecting to a node or room on the Internet.....	10	Creating and transmitting messages to local nodes.....	28
Communicating with others	12	Transmitting saved messages or images to local nodes...29	
Useful functions in digital mode	13	Creating and transmitting messages to nodes or	
Using preset channels	13	rooms on the Internet.....	29
Releasing the WIRES-X connection	15	Transmitting saved messages or images to nodes or	
Connecting to analog nodes	15	rooms on the Internet.....	30
Connecting to nodes or rooms on the Internet	15	Transmitting audio messages	30
Communicating with others	16	Transmitting emergency audio information to	
Disconnecting from the node or room.....	16	local nodes.....	30
Various display functions.....	16	Transmitting routine audio messages to local nodes.....	31
Confirming the location of digital nodes.....	16	Transmitting emergency audio information to nodes or	
Using the News Function of WIRES-X	17	rooms on the Internet.....	31
Viewing messages	17	Transmitting routine audio messages to nodes or	
Viewing text data in local nodes	17	rooms on the Internet.....	31
Viewing text data on the WIRES-X server (INT NEWS)...19		Using the FTM-100DR/DE transceiver as a node station.....	32
Viewing text data in nodes or rooms on the Internet	19	WIRES-X Setup Menu.....	33
Importing images.....	21	WIRES-X setup menu list.....	33
Importing images from local nodes.....	21	Using the WIRES-X setup menu.....	33
Importing images from the WIRES-X server (INT NEWS) ...21		Setting the operating frequencies for	
Importing data from nodes or rooms on the Internet	22	repeaters/WIRES-X	33
Viewing imported data later.....	22	The DG-ID feature to access the WIRES-X node station...33	

What is WIRES-X?

WIRES (Wide-coverage Internet Repeater Enhancement System) is an Internet communication system which expands the range of amateur radio communication. By relaying radio signals via the Internet, stations can be connected where radio waves cannot reach each other.

WIRES uses local nodes (stations connected to the Internet via PCs) as access points which repeat communications of conventional amateur radio stations. When the local nodes are connected to each other via the Internet, amateur stations all over the world can communicate with each other just by connecting conventional stations to the local nodes.

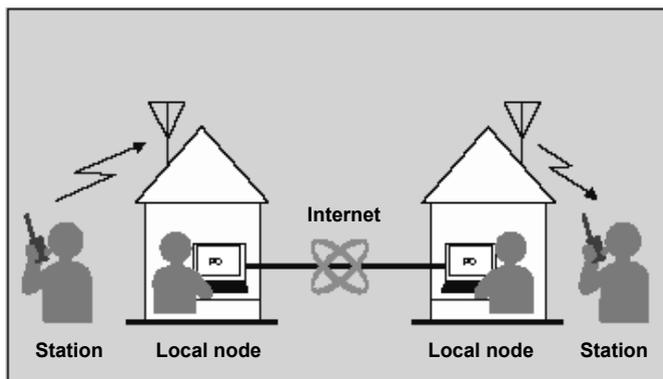

In addition to the WIRES features, WIRES-X also supports digital communications. Using WIRES-X, you can transmit and receive digitalized data such as text, image data and audio.

Using the WIRES-X in conjunction with the transceiver allows you to have analog/digital communications with stations outside the communication range. In digital communication mode, you can search stations by call signs or keywords, and exchange data such as messages and location information.

Terminology

Node

Radio repeater connected to the Internet via a PC, which repeats communications of conventional amateur radio stations as an access point

- **Local node**


Node within the radio communication range of a conventional amateur radio station

- **Analog node**

Node which is a transceiver or repeater using the conventional FM format and can only repeat DTMF (Dual Tone Multi Frequencies) codes and analog audio transmissions/receptions

- **Digital node**

Node which is a transceiver or repeater compatible with digital communications in C4FM (Continuous 4 level FM) format. With this type of node, you can transmit/receive audio as well as text and image data. You can also repeat DTMF codes and analog audio transmissions/receptions.

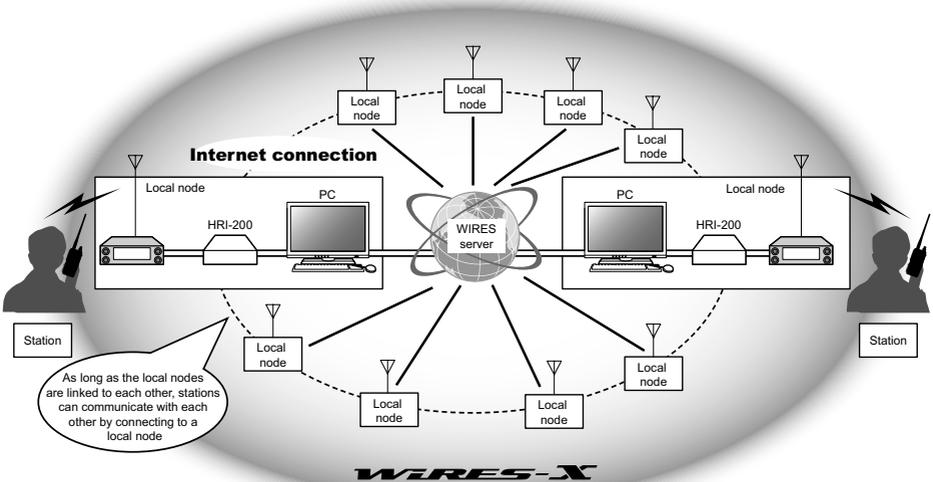

■ WIRES-X user ID

YAESU provides identification names with the WIRES-X nodes. For each node, a DTMF ID (five-digit number) and user ID (alphanumeric characters consisting of up to 10 digits) are provided.

If you know the ID of the node you want to connect with, you can transmit the DTMF code from the transceiver, and directly specify the node to connect to by searching by characters (only for digital nodes).

● ID list

Nodes and rooms which are currently operating WIRES are listed and published on our website. We provide information such as IDs, call signs and operating frequencies (some may not be published due to the wishes of owners).

■ Room (Round QSO Room)

WIRES system community space to which multiple nodes can connect simultaneously. As well as voice communications, you can also chat with text messages on the PC used for the local node.

● Open room

Room which allows all nodes to connect to

● Closed room


Room only registered nodes can connect to

● Owner

Node which opens and organizes a room

● Activity

Nodes currently connected to a specific room

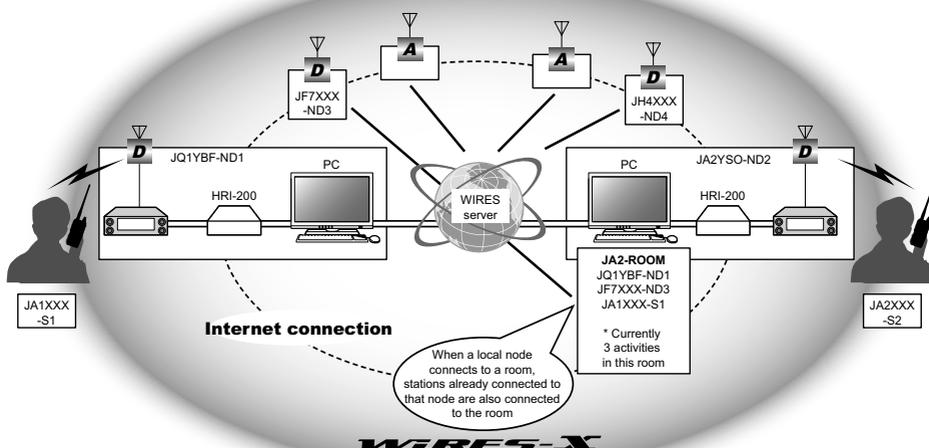


Tip In the illustration, **D** refers to digital nodes and **A** refers to analog nodes.

■ News function

This feature allows you to save digital data such as text, image and audio data on the PC used for the local node, and access the data from the connected digital station.

From the digital transceiver, you can access the local node (LOCAL NEWS) and the data storage area (news station) in the node or room you connect to, and import (upload) and export (download) data.

The owners of a node or room can import/export data from/to their own station via a PC. The owner can also delete data and change information such as its name and attribution. The WIRES-X server also has its own news station (INT NEWS) where you can read information and data supplied by YAESU.

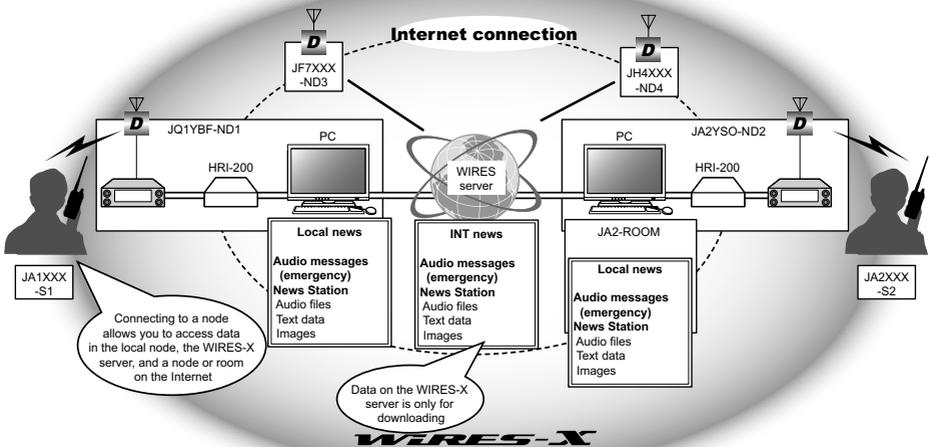

■ Preset search function

If the preferred channel for connecting to a local node is programmed (preset) in the transceiver, the channel can be scanned automatically when you start up WIRES-X.

Utilize this function as follows:

- Quickly connect to the local node you usually access by presetting its frequency in advance.
- By presetting to a shared channel frequency with your friends nodes, you can quickly connect the transceiver to a local node even while you are traveling in other areas.

You can use two transceivers as nodes, one for the preset search channel (receive only channel) and the other for the voice channel (operation channel).

Inputting Characters

You can input letters and characters by following the procedure below.

Switching the character type

Press **TXPO** (**ABC** appears on the upper side). Pressing each time changes the character type in the following order.

Uppercase letters → symbols → lowercase letters → numbers

Deleting all input characters

Press **VIM** (**CLR** appears on the upper side).

Moving the cursor to the left

Press **Qx** (**←** appears on the upper side).

Moving the cursor to the right

Press **Gv** (**→** appears on the upper side).

Deleting the most recently input character

Press **SQL** (**✕** appears on the upper side).

Completing input

Press **DISP** or **BACK**.

Connecting to a Faraway Station Using WIRES-X

Finding a local node

To communicate using WIRES-X, a WIRES-X node station (local node) must be established within radio contact range of the user transceiver.

WIRES-X nodes are stations users voluntarily registered with Yaesu. Their information such as locations and operation styles are listed on our website:

<https://www.yaesu.com/jp/en/wires-x/index.php>

First use this list to search for a nearby local node, and nodes on the Internet used by people you want to communicate with; write down the node names and frequencies. Since the connection procedure differs between digital stations and analog stations, confirm whether the node is an analog station or a digital station.

- When the local node is a digital station:
Connect from your transceiver in digital mode.
(Nodes on the Internet can connect to both digital and analog stations.)
- When the local node is an analog station:
Connect from your transceiver in analog mode.
(Nodes on the Internet can connect to both analog and digital stations.)

Connecting in digital mode

- Ascertain the DSQ code or the DG-ID setting of the WIRES-X node station. Connecting to the WIRES-X node requires the transceiver DG-ID be set according to the DSQ code or the DG-ID code set on the WIRES-X node station.
- Confirm that the operating mode of WIRES-X node has been set to the C4FM digital mode.
- Before using WIRES-X, set the communication mode (modulation mode) to C4FM.

Connecting to a WIRES-X digital node (Recommended)

- 1 Rotate the DIAL to set the operating band to the frequency of the desired local node.
- 2 Set the transmit/receive DG-ID to the same ID number as the node station. For details, refer to the FTM-100DR/DE Operating Manual.
- 3 Transmit corresponding to the transmit/receive frequency.





- Tips**
- If receiving the signal from the node, transmit it as is.
 - If not receiving the signal from the node, it is possible that the node station is not connected to the Internet ➡ proceed to step "Connecting to the other node ID or the other room ID".

Connecting to the other node ID or the other room ID


- 1 Rotate the DIAL to set the operating band to the frequency of the desired local node.
- 2 Set the WIRES-X DG-ID to the same ID number as the node station. Refer to “The DG-ID feature to access the WIRES-X node station” (page 33).
- 3 Press and hold **[D-X]** for over one second.

[X] flashes on the left side of the frequency display. When a local node is found, **[X]** is lit solid, and the node name and city name appear on the upper part of the screen.

Tip Depending on the connection status, the screen will show one of four display patterns.

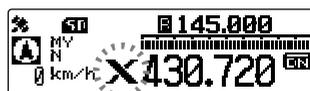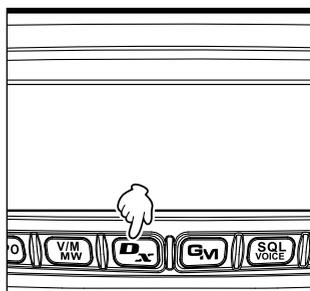

- (1) Connected to the local node, but unable to connect to Internet nodes or rooms (never before established connection to Internet nodes or rooms)
- (2) Connected to the local node, but unable to connect to Internet nodes or rooms (previously succeeded in establishing connection to Internet nodes or rooms)
- (3) Connected to the local node, successfully connected to an Internet node or room (the Internet node or room is the same as the one used before)
- (4) Connected to the local node, successfully connected to an Internet node or room (the Internet node or room is different from the one used before)

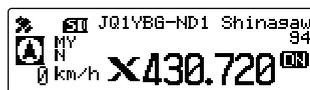

When **[▶]** is displayed, rotate the DIAL. Call signs of nodes and rooms on the Internet you previously connected to flash.

Tip While **[X]** is flashing, briefly press the **[D-X]** key to re-establish connection to the local node.

Tip When any local node cannot be found, **[X]** will disappear in five minutes.

Tip When the detected local node is a repeater station, **[/R]** appears below **[X]**.

Caution

WIRES-X can only be used on the operating band.


Connecting to a node or room on the Internet

You can connect to the desired node or room in one of the following ways:

- Selecting an accessible node or room from the list
- Specifying the node name or room name
- Selecting the most recently connected node or room
- Specifying the DTMF ID of the node or room you want to connect to



● Searching from the node & room lists

- 1 Press and hold **BAND MHz** for over one second.
Displays the category list.

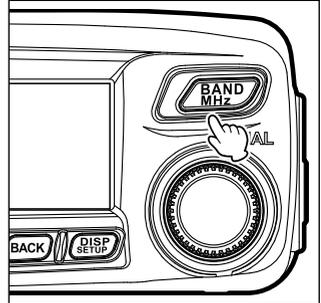

- 2 Rotate the DIAL to select **[ALL]**, then press **DISP SETUP**.
Displays the list of accessible nodes and rooms.

- Tips**
- Connection destinations are displayed from the room list and then node list.
 - On the connection destination room columns, the number of activities (the number of nodes connected to each room) appears on the right side.

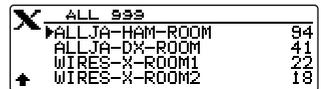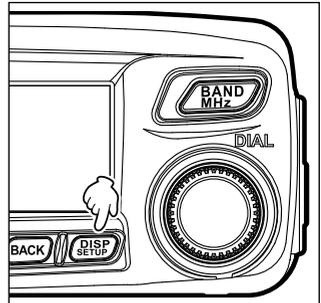

- 3 Rotate the DIAL to select the node or room you want to connect to, then press **DISP SETUP**.
Starts connection.

- Tip** By pressing **[PTT]**, you can also establish connection while talking.

Once connection is successfully established, the menu list of the node (room) you are connected to will appear.



● Searching by node or room name

1 Press and hold  for over one second.

Displays the category list.

2 Rotate the DIAL to select **[SEARCH & DIRECT]**, then press .

Displays the character input screen.

3 Enter all or part of the user ID or room name.

The characters you have just entered appear on the screen.



Tip For details on how to enter letters, refer to “Inputting Characters” on page 7.


4 Press .

Starts searching. If connection destinations with the first part of a name partially matching the name you entered are found, they will be listed.

- Tips**
- If there is no connection destination matching the entered name, “No Data” appears and then the screen returns to the “SEARCH & DIRECT” screen. Enter characters to search by again.
 - If the name you entered is found, the transceiver establishes connection immediately.
 - The screen displays the room list search results followed by the node list search results.
 - On the room columns in the search results, the number of activities (the number of nodes connected to each room) appears on the right side.

5 Rotate the DIAL to select the node or room you want to connect to, then press .

Starts connection.

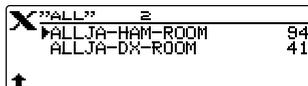

Tip By pressing **[PTT]**, you can also establish connection while talking.

Once connection is successfully established, the menu list of the node (room) you are connected to will appear.

● Connecting to the node or room you have most recently connected

If you have previously connected to a node or room on the Internet, it appears and flashes on the upper part of the screen.

Press  to start connection of the transceiver to the flashing node or room, and once connection is established, the menu list of the node (room) you are connected to will appear.


If there is  on the left side of the node name on the upper part of the screen, rotate the DIAL to display the node you have most recently connected to.



Connecting to a Faraway Station Using WIRES-X


● Specifying the DTMF ID of the node or room you want to connect to

- 1 Press and hold **[#]** on the microphone for over one second.
Displays the DTMF input screen.
- 2 Use the numeric keys on the microphone to enter the DTMF ID (five-digit code).
- 3 Press **[#]** on the microphone.
Tip Pressing **[*]** on the microphone closes the DTMF input screen.

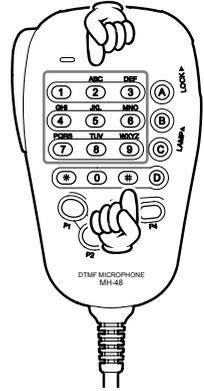

Communicating with others

- 1 While displaying the station you are currently connected to, press **[PTT]**.
The transceiver switches to transmission mode.
- 2 Speak into **[MIC]**.
Tip Place the microphone about 5 cm away from your mouth when you speak.
Caution Do not continuously transmit over an extended period of time to reduce the risk of overheating, malfunction, and injury.
- 3 Release **[PTT]**.
The transceiver switches to reception mode.

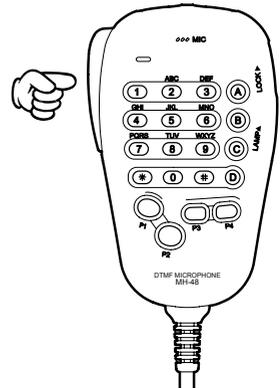

Tip

You can communicate with the node or room you are connected to by pressing **[PTT]** even when viewing data in a node or room on the Internet using the NEWS function in digital mode.

Useful functions in digital mode


Using preset channels

Programming (presetting) a channel frequency allows you to easily connect to a local node.

By sharing a channel frequency with other nodes, you can connect the transceiver to a local node even while you are out. This is useful for a group to operate a station.

● Presetting a channel

- 1 Press and hold **DISP SETUP** for over one second.
Displays the Setup menu.

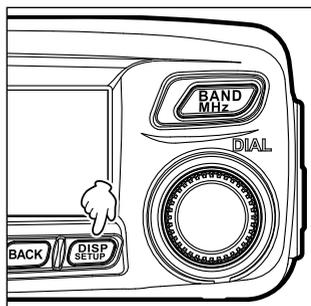

- 2 Rotate the DIAL to select **[7 WIRES-X]**, then press **DISP SETUP**.

Displays the menu list.




- 3 Check that **[1 RPT/WIRES FREQ]** is displayed, then press **DISP SETUP**.

Displays the selection items.



- 4 Rotate the DIAL to select **[PRESET]**, then press **DISP SETUP**.

Displays the frequency setting screen.

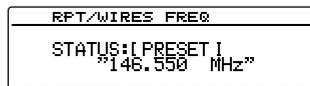

Tip The default setting is MANUAL.

- 5 Rotate the DIAL to select the frequency.

- Tips**
- Rotating the DIAL changes the frequency by the increments specified from the Setup menu.
 - Pressing and holding **BAND MHz** allows you to set the frequency in 1 MHz units.
 - The default settings are 146.550.

- 6 Press and hold **DISP SETUP** for over one second.

Sets the frequency and returns the screen to the frequency display screen.



Connecting to a Faraway Station Using WIRES-X

● Connecting to a preset channel

1 Follow the procedure in “Presetting a channel” on page 13 to make the preset channel available in advance

2 Press and hold  for over one second.

On the left side of the frequency display, [P] and [X] appear alternately.

When a local node is found, [X] lights up, and the node name and city name appear on the upper part of the screen.



Tip When any local node cannot be found, [P] disappears in five minutes.

Tip

If the frequency of the detected local node is different from that of the preset channel, the frequency automatically switches to the node frequency.

● Ending searching by a preset channel

1 Follow steps 1 to 3 in “Presetting a channel” on page 13 to display the selection items of [1 RPT/WIRES FREQ].

2 Rotate the DIAL to select [MANUAL].




3 Press and hold  for over one second.

Returns the screen to the frequency display screen.

● Disconnecting from the node or room

1 Press and hold [*] on the microphone for over one second.


If disconnection is successful, the screen returns to the local node connection screen.

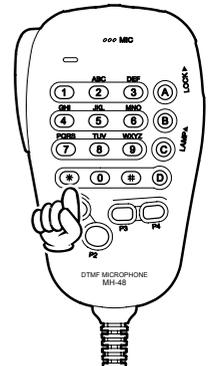

Releasing the WIRES-X connection

Pressing and holding  for over one second switches the screen to the frequency display screen, and [X] displayed on the left side of the frequency display disappears.

Tip The local node and the node or room remain connected.

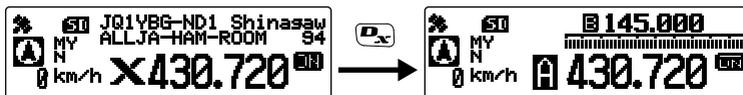

Connecting to analog nodes

When the node you want to connect to is an analog station, use the DTMF function on the transceiver. For details on how to use the DTMF function, refer to “Using the DTMF function” in the basic operating manual.

Connecting to nodes or rooms on the Internet

1 Set the main band frequency to the local node frequency.

2 Press  to switch to analog FM mode.

Tip For details, refer to “Selecting communication mode” in the basic operating manual.

3 In the Setup menu from [4 SIGNALING] → [3 AUTO DIALER], select “OFF”.

Tip For details refer to “Transmitting the DTMF code manually” in the basic operating manual.


4 While pressing [PTT] on the microphone, press [0] to [9], [*], [#], [A] to [D].

Transmits the DTMF code.

5 Release [PTT], and keep the transceiver in reception mode for about 10 seconds.

Once connection is successfully established, you will be able to hear audio.

Caution The connection destination screen does not appear.

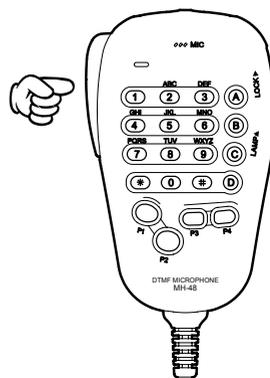

Tip

You can store DTMF codes consisting of up to 16 digits for 9 channels on the transceiver. If you register the codes of frequently-used connection destinations in advance, you can easily transmit a code by pressing its abbreviated number while pressing [PTT]. For details, refer to “Using the DTMF Function” in the basic operating manual.

Communicating with others

1 Press [PTT].

The transceiver switches to transmission mode.

2 Speak into [MIC].

Tip Place the microphone about 5 cm away from your mouth when you speak.

Caution Do not continuously transmit over an extended period of time to reduce the risk of overheating, malfunction, or injury.

3 Release [PTT].

The transceiver switches to reception mode.

Disconnecting from the node or room

1 While pressing [PTT], press #99999 (DTMF disconnection command).

Disconnects the node or room.

Various display functions

Confirming the location of digital nodes

When the signal from the local node you have connected to contains GPS location information, you can display the location information on the screen.

When the connection destination is displayed, the location information of your station is displayed on the left side of the screen.

Press **(DISP SETUP)** once briefly to display the location information of the partner station on the left side of the screen. The screen displays the compass indicating the direction and distance to the local node from your station.



Tip

When the location of the partner station is displayed, press **(DISP SETUP)** once briefly to display the satellite acquisition information. Press **(DISP SETUP)** again briefly to display the location information of your station again.

Using the News Function of WIRES-X

When using WIRES-X in digital mode, you can transmit/receive messages (text data) and images; you can also record/play audio messages.

Viewing messages


You can read messages (text data) that are transmitted/received by either a local node, or a node or room on the Internet, from the transceiver.

Caution

- To read messages, insert a microSD memory card into the transceiver in advance. For details, refer to “Using a microSD memory card” in the basic operating manual.

Viewing text data in local nodes



- 1 Follow the procedure in “Connecting to the other node ID or the other room ID” on page 9 to connect your transceiver to the desired local node.
- 2 Press and hold **BAND MHz** for over one second.
Displays the “CATEGORY” screen.

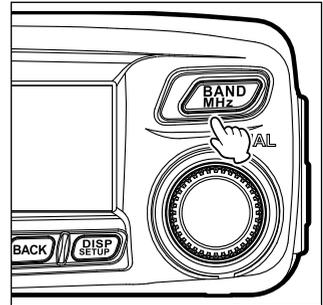

- 3 Rotate the DIAL to select **[LOCAL NEWS]**, then press **DISP SETUP**.
Displays the “LOCAL NEWS” screen.



- 4 Rotate the DIAL to select the desired local node, then press **DISP SETUP**.
If data reception is successful, the menu list of the local node appears.

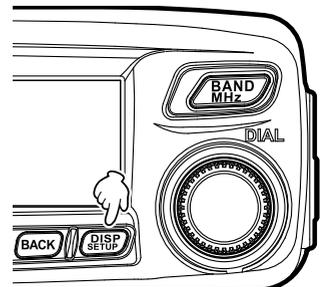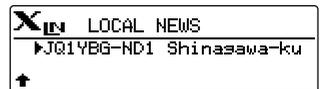

Using the News Function of WIRES-X

- 5 Rotate the DIAL to select **[NEWS STATION]**, then press **[DISP SETUP]**.

Displays the upload (transmission)/download (reception) select screen.



- 6 Rotate the DIAL to select **[DOWNLOAD]**, then press **[DISP SETUP]**.

Displays the data type select screen.



- 7 Rotate the DIAL to select **[MSG]**, then press **[DISP SETUP]**.
If data reception is successful, the data list appears.

Tip The list shows the registered data in reverse chronological order.




- 8 Rotate the DIAL to select the message you want to view, then press **[DISP SETUP]**.

Downloads the data and displays the content of the message.



- 9 Press **[BACK]**.

Returns the screen to the data list.

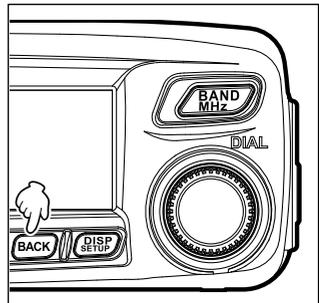

Tips

- On the data content display screen, press **[DISP SETUP]** to display the sender's location information at the time the data was sent.
- On each screen, pressing **[BACK]** returns the screen to the previous screen.

● Operations on the data list

When there is a large number of data items available, the list will be divided into smaller lists with 3 data items each.

- Rotating the DIAL scrolls the screen.
- Pressing **[TXPO]** (**[TOP]** appears on the upper side) jumps to the top of the list.
- Pressing **[V/M WW]** (**[END]** appears on the upper side) jumps to the end of the list.

Viewing text data on the WIRES-X server (INT NEWS)

You can read text information provided by Yaesu on the WIRES-X server from the transceiver.

1 Follow the procedure in “Connecting to the other node ID or the other room ID” on page 9 to connect your transceiver to the desired local node.

2 Press and hold **BAND** for over one second.

Displays the “CATEGORY” screen.

3 Rotate the DIAL to select **[INT NEWS]**, then press **DISP SETUP**.

Displays the menu list of the WIRES-X server.



4 Rotate the DIAL to select **[NEWS STATION]**, then press **DISP SETUP**.

Displays the data type select screen.



5 Rotate the DIAL to select **[MSG]**, then press **DISP SETUP**.

If data reception is successful, the data list appears.

Tip The list shows the registered data in reverse chronological order.



6 Rotate the DIAL to select the message you want to view, then press **DISP SETUP**.

Starts download. “DOWNLOAD” appears and flashes.

Downloads the data and displays the content of the message.



7 Press **BACK**.

Returns the screen to the data list.

Viewing text data in nodes or rooms on the Internet

1 Follow the procedure in “Connecting to nodes or rooms on the Internet” on page 10 to connect the transceiver to the desired node or room on the Internet.

2 Press and hold **BAND**.

Displays the “CATEGORY” screen.

3 Rotate the DIAL to select **[LOCAL NEWS]**, then press **DISP SETUP**.

Displays the “LOCAL NEWS” screen.



Using the News Function of WIRES-X

- 4 Rotate the DIAL to select the desired node or room on the Internet, then press **(DISP SETUP)**.

If data reception is successful, the menu list of the node or room on the Internet appears.



- 5 Rotate the DIAL to select **[NEWS STATION]** or **[LOCAL NEWS]**, then press **(DISP SETUP)**.

Displays the upload (transmission)/download (reception) select screen.



- 6 Rotate the DIAL to select **[DOWNLOAD]**, then press **(DISP SETUP)**.

Displays the data type select screen.



- 7 Rotate the DIAL to select **[MSG]**, then press **(DISP SETUP)**.

If data reception is successful, the data list appears.

Tip The list shows the registered data in reverse chronological order.



- 8 Rotate the DIAL to select the message you want to view, then press **(DISP SETUP)**.

Starts downloading. "DOWNLOAD" appears and flashes.



Downloads the data and displays the content of the message.



- 9 Press **(BACK)**.

Returns the screen to the data list.

Tip

On the data content display screen, press **(DISP SETUP)** to display the sender's location information at the time the data was sent.

Caution

When the category list or data list is displayed, pressing **[PTT]** readies the transceiver to transmit audio to the node or room on the Internet you are currently connected to.

Importing images

You can import images transmitted/received by either a local node, or a node or room on the Internet onto the transceiver.

Cautions

- To import images, insert a microSD memory card into the transceiver in advance. For details, refer to “Using a microSD memory card” in the basic operating manual.
- Imported images cannot be viewed on the transceiver. To view images after importing, remove the microSD memory card from the transceiver, and then copy the data to your PC, etc.

Importing images from local nodes

1 Follow steps 1 to 6 in “Viewing text data in local nodes” on page 17 to display the data type select screen.

2 Rotate the DIAL to select **[PICT]**, then press **(DISP/SETUP)**.

Displays the data list.

Tip The list shows the registered data in reverse chronological order.



3 Rotate the DIAL to select the image you want to download, then press **(DISP/SETUP)**.

Starts downloading. “DOWNLOAD” appears and flashes.



After data import completes, the image appears.

- Tips**
- Data in unsupported formats cannot be imported. In such a case, “Not Completed” appears, and then the screen returns to the data type select screen.
 - When the microSD memory card does not have enough free space, data cannot be imported. In such a case, “Memory is full” appears, and then the screen returns to the data list.

4 Press **(BACK)**.

Returns the screen to the data list.

Importing images from the WIRES-X server (INT NEWS)

You can import images provided by Yaesu on the WIRES-X server onto the transceiver.

1 Follow steps 1 to 4 in “Viewing text data on the WIRES-X server (INT NEWS)” on page 19 to display the data type select screen.

2 Rotate the DIAL to select **[PICT]**, then press **(DISP/SETUP)**.

Displays the data list.

Tip The list shows the registered data in reverse chronological order.



3 Follow step 3 in “Importing images from local nodes” on page 21 to download data.

Using the News Function of WIRES-X

4 Press **(BACK)**.

Returns the screen to the data list.

- Tips**
- Data in unsupported formats cannot be imported. In such a case, “Not Completed” appears, and then the screen returns to the data type select screen.
 - When the microSD memory card does not have enough free space, data cannot be imported. In such a case, “Memory is full” appears, and then the screen returns to the data list.

Importing data from nodes or rooms on the Internet

1 Follow steps 1 to 4 in “Viewing text data in nodes or rooms on the Internet” on page 19 to display the data type select screen.

2 Rotate the DIAL to select **[PICT]**, then press **(DISP SETUP)**.

Displays the data list.

- Tip** The list shows the registered data in reverse chronological order.



3 Follow step 3 in “Importing images from local nodes” on page 21 to import data.

4 Press **(BACK)**.

Returns the screen to the data list.

Caution

When the category list or data list is displayed, pressing **[PTT]** readies the transceiver to transmit audio to node or room on the Internet you are currently connected to.

Viewing imported data later


You can also view the imported data later.

1 Press and hold **(GM)** for over one second.


Displays the “DG-ID SETUP” screen.

Displays the “GM MESSAGE” screen or “GM PICT”

screen. Pressing **(SQL VOICE)** each time switches the screen.

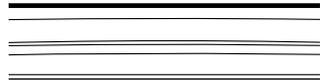

- Press **BAND MHz**, (**LOG** appears on the left side)
Displays the “LOG SELECT” screen.

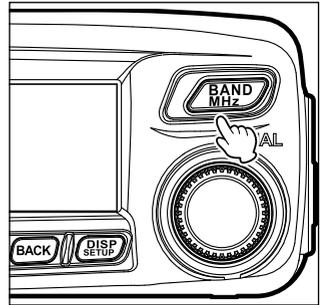

- Rotate the DIAL to select the data you want to view, then press **DISP SETUP**.

Tip [X] appears on the left side of WIRES-X data.

Pressing **TXPO** (**TOP** appears on the upper side) jumps to the top of the list.

Pressing **VIM MW** (**END** appears on the upper side) jumps to the end of the list.

For PICT data, pressing **IX** (**INFO** appears on the upper side) displays the data size.

Displays the content of the message or image information.




- Press **BACK**.
Returns the screen to the previously viewed screen.

Deleting imported data

Deleting a file

- Follow steps 1 to 3 “Viewing imported data later” on page 22 to display the content of the message or image data.
- Press **Gv** (**DEL** appears on the upper side).
The confirmation message appears.

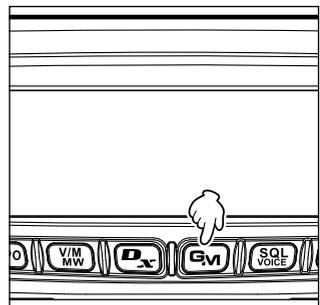

Using the News Function of WIRES-X

- 3 Rotate the DIAL to select **[OK?]**, then press **(DISP SETUP)**.
Deletes the data and returns the screen to the data list.



Listening to audio messages

You can play and listen to audio files transmitted/received by a local node, or node or room on the Internet.

Audio files are categorized into the following two types:

EMERGENCY: Emergency information. Depending on the node or room settings, mandatory updates are supplied to connected nodes and rooms in five-minute intervals for two hours starting from the initial dissemination of the news.

NEWS STATION: Normal message. You can listen to the message anytime you (LOCAL NEWS) want as long as the message is not deleted from the node or room.

Caution

You can play and listen to audio files using the transceiver but you cannot save audio files onto the transceiver.

Listening to emergency information in the local node

1 Follow steps 1 to 4 in “Viewing text data in local nodes” on page 17 to display the menu list of the local node.

2 Rotate the DIAL to select **[EMERGENCY]**, then press **(DISP SETUP)**.

Displays the data list.

Tips

- The list shows the registered data in reverse chronological order.

- Data registered within the past two hours flashes.

3 Rotate the DIAL to select the audio file you want to play, then press **(DISP SETUP)**.

Starts audio playback. “DOWNLOAD” appears and flashes.

After playback ends, the screen returns to the data list.



Listening to routine messages in local nodes

1 Follow steps 1 to 6 in “Viewing text data in local nodes” on page 17 to display the data type select screen.

2 Rotate the DIAL to select **[VOICE]**, then press **(DISP SETUP)**.

Displays the data list.

Tip The list shows the registered data in reverse chronological order



Using the News Function of WIRES-X

- 3 Rotate the DIAL to select the audio file you want to play, then press **(DISP SETUP)**.

Starts audio playback. “DOWNLOAD” appears and flashes.

After playback ends, the screen returns to the data list.



Listening to emergency information on the WIRES-X server (INT NEWS)

You can play and listen to the audio data provided by Yaesu on the WIRES-X server.

- 1 Follow steps 1 to 3 in “Viewing text data on the WIRES-X server (INT NEWS)” on page 19 to display the menu list of the WIRES-X server.

- 2 Rotate the DIAL to select **[EMERGENCY]**, then press **(DISP SETUP)**.

Displays the data list.

- Tips**
- The list shows the registered data in reverse chronological order.
 - Data registered within the past two hours flashes.



- 3 Rotate the DIAL to select the audio file you want to play, then press **(DISP SETUP)**.

Starts audio playback. “DOWNLOAD” appears and flashes.

After playback ends, the screen returns to the data list.



Listening to routine messages on the WIRES-X server (INT NEWS)

- 1 Follow steps 1 to 4 in “Viewing text data on the WIRES-X server (INT NEWS)” on page 19 to display the data type select screen.

- 2 Rotate the DIAL to select **[VOICE]**, then press **(DISP SETUP)**.
- Displays the data list.

- Tip**
- The list shows the registered data in reverse chronological order.



- 3 Rotate the DIAL to select the audio file you want to play, then press **(DISP SETUP)**.

Starts audio playback. “DOWNLOAD” appears and flashes.

After playback ends, the screen returns to the data list.



Listening to emergency information in nodes or rooms on the Internet

- Follow steps 1 to 4 in “Viewing text data in nodes or rooms on the Internet” on page 19 to display the menu list of the node or room you want to connect to.
- Rotate the DIAL to select **[EMERGENCY]**, then press **(DISP SETUP)**.

Displays the data list.

- Tip**
- The list shows the registered data in reverse chronological order.
 - Data registered within the past two hours flashes.



- Rotate the DIAL to select the audio file you want to play, then press **(DISP SETUP)**.

Starts audio playback. “DOWNLOAD” appears and flashes.

After playback ends, the screen returns to the data list.



Listening to routine messages in nodes or rooms on the Internet

- Follow steps 1 to 6 in “Viewing text data in nodes or rooms on the Internet” on page 19 to display the data type select screen.
- Rotate the DIAL to select **[VOICE]**, then press **(DISP SETUP)**.

Displays the data list.

- Tip** The list shows the registered data in reverse chronological order.

- Rotate the DIAL to select the audio file you want to play, then press **(DISP SETUP)**.

Starts audio playback. “DOWNLOAD” appears and flashes.

After playback ends, the screen returns to the data list.



Transmitting messages and images

You can transmit data such as messages (text data) and images saved on the microSD memory card inserted into the transceiver, to a local node, or a node or room on the Internet. You can also create a new message and transmit it.

Tip

For details on microSD memory cards, refer to “Inserting a microSD memory card” in the basic operating manual.

Creating and transmitting messages to local nodes


1 Follow steps 1 to 5 in “Viewing text data in local nodes” on page 17 to display the upload (transmission)/download (reception) select screen.

2 Rotate the DIAL to select **[UPLOAD]**, then press **[DISP SETUP]**.

Displays the data type select screen.



3 Rotate the DIAL to select **[MSG]**, then press **[DISP SETUP]**.
Displays the data list.

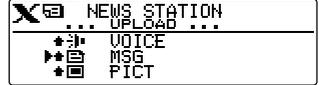

4 Rotate the DIAL to select **[NEW]**, then press **[DISP SETUP]**.



5 Press **[TXPD]** (**[EDIT]** appears on the upper side)
Displays the message entry screen.

6 See “Input Characters” on page 7 to input a message.


7 Press **[BACK]**.

Displays the entire message.

Tips


- To save the created message press **[TXPD]** (**[SAVE]** appears on the upper side). For details, see “Registering routine messages” in the basic operating manual.

- To continue message entry, press **[TXPD]** (**[EDIT]** appears on the upper side).

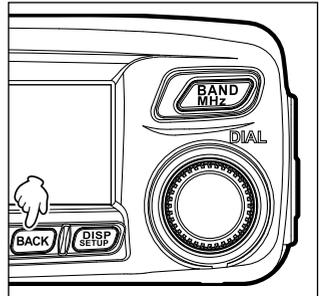

8 Press **[SQL VOICE]** (**[UPLO]** appears on the upper side).
Starts message transmission.

After message transmission completes, “Completed” appears and then the screen returns to the data list.

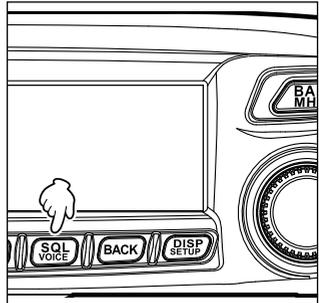


Tip

Press  ( appears on the upper side) to select one of the 19 routine messages.

1	QRM	8	Good job	15	wait for you
2	QRP	9	Good day	16	Pick me up
3	QRT	10	Good evening	17	Thank you
4	QRX	11	Good night	18	OK
5	QRZ	12	Send messages	19	urgent
6	QSY	13	Send pictures		
7	Good morning	14	on my way		

Transmitting saved messages or images to local nodes

- Follow steps 1 to 2 in “Creating and transmitting messages to local nodes” on page 28 to display the data type select screen.
- Rotate the DIAL to select **[MESSAGE]** or **[PICT]**, then press . Displays the data list.
- Rotate the DIAL to select the message or image you want to send, then press . Displays the content of the message or image.
- Press  (**[UPLD]** appears on the upper side). Starts data transmission. After data transmission completes, “Completed” appears and then the screen returns to the data type select screen.

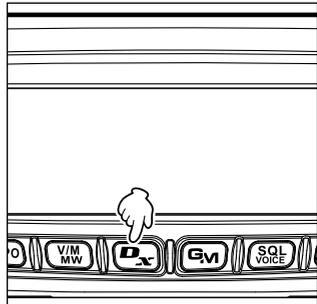

Creating and transmitting messages to nodes or rooms on the Internet

- Follow steps 1 to 4 in “Viewing text data in nodes or rooms on the Internet” on page 19 to display the menu list of the node or room you want to connect to.
- Rotate the DIAL to select **[NEWS STATION]**, then press . Displays the upload (transmission)/download (reception) select screen.
- Follow steps 3 to 7 in “Creating and transmitting messages to local nodes” on page 28 to create and transmit a message.



Transmitting saved messages or images to nodes or rooms on the Internet

- 1 Follow steps 1 to 3 in “Creating and transmitting messages to nodes or rooms on the Internet” on page 29 to display the data type select screen.
- 2 Follow steps 3 to 7 in “Creating and transmitting messages to local nodes” on page 28 to select and transmit data.

Transmitting audio messages

You can transmit audio messages spoken into the microphone as data to a local node, or node or room on the Internet.

Audio files are categorized into the following two types:

EMERGENCY: Emergency information. Depending on the node or room settings, mandatory updates are supplied to connected nodes and rooms in five-minute intervals for two hours starting from the initial dissemination of the news.

NEWS STATION: Routine message. You can listen to the message anytime you (LOCAL NEWS) want as long as the message is not deleted from the node or room.

Transmitting emergency audio information to local nodes

- 1 Follow steps 1 to 4 in “Viewing text data in local nodes” on page 17 to display the menu list of the local node.
- 2 Rotate the DIAL to select **[EMERGENCY]**.



- 3 Press and hold **[PTT]**.
“**EMERGENCY Upload?**” appears and beep sounds for three seconds.

Tip Releasing **[PTT]** cancels the upload of emergency information.



- 4 While pressing **[PTT]**, speak into **[MIC]**.

Tip The maximum recording time is one minute.

Starts message transmission, and flashes  **UPLOAD** and the countdown display on the screen.

After message transmission completes, “Completed” appears and then the screen returns to the menu list of the local node.

Transmitting routine audio messages to local nodes

1 Follow steps 1 to 5 in “Viewing text data in local nodes” on page 17 to display the upload (transmission)/download (reception) select screen.

2 Rotate the DIAL to select **[UPLOAD]**, then press

.

Displays the data type select screen.



3 Rotate the DIAL to select **[VOICE]**, then press .



4 While pressing **[PTT]**, speak into **[MIC]**.

Tip The maximum recording time is one minute.

Starts message transmission, and flashes  **UPLOAD** and the countdown display on the screen.

After message transmission completes, “Completed” appears and then the screen returns to the data type select screen.

Transmitting emergency audio information to nodes or rooms on the Internet


1 Follow steps 1 to 4 in “Viewing text data in nodes or rooms on the Internet” on page 19 to display the menu list of the node or room you want to connect to.

2 Follow steps 2 to 4 in “Transmitting emergency audio information to local nodes” on page 31 to send a message.

Transmitting routine audio messages to nodes or rooms on the Internet

1 Follow steps 1 to 4 in “Viewing text data in nodes or rooms on the Internet” on page 19 to display the menu list of the node or room you want to connect to.

2 Rotate the DIAL to select **[NEWS STATION]**, then press

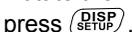.

Displays the upload (transmission)/download (reception) select screen.




3 Follow steps 2 to 4 in “Transmitting routine audio messages to local nodes” on page 31 to transmit a message.

Using the FTM-100DR/DE transceiver as a node station

Follow the procedure below to use the FTM-100DR/DE transceiver as a node station.


- 1 Press and hold  for over one second to turn OFF the transceiver.

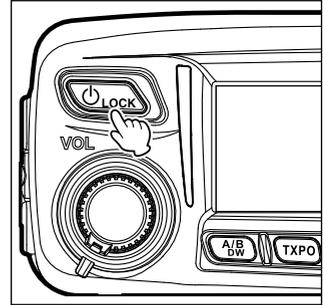

- 2 While pressing  and  simultaneously, press and hold  for over one second to turn ON the power.

Sets the FTM-100DR/DE transceiver to node station mode. Follow steps 1 to 2 again to cancel node station mode.

- Tips**
- Press and hold  for over one second to hide all displays on the screen (the mode display and status indicator also turn off). Press  again to display the hidden displays.
 - Pressing  each time switches the sub-band display: clock→power supply voltage→frequency.
 - Rotating the DIAL adjusts the contrast.

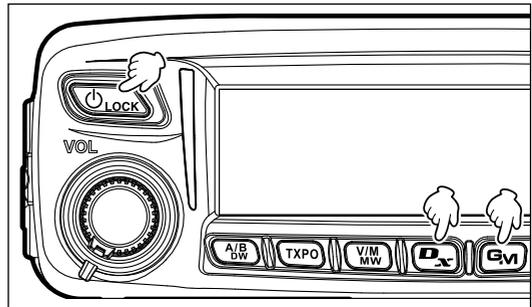

WIRES-X Setup Menu

WIRES-X setup menu list

Menu/Item	Functions	Setting items (Bold items are default settings.)
1 RPT/WIRES FREQ	Setting the operating frequencies for repeaters/ WIRES-X Setting preset frequencies	MANUAL/PRESET 146.550
2 DG-ID	Setting the DG-ID number	AUTO / 01 to 99

Using the WIRES-X setup menu

■ Setting the operating frequencies for repeaters/WIRES-X

Select whether to set the frequency manually or use the preset (registered in advance) frequency when connecting to a local node.

For details, refer to “Presetting a channel” on page 13.

■ The DG-ID feature to access the WIRES-X node station

When accessing to the WIRES-X node station, the connecting node station may be selected in accordance with the DG-ID setting of the node stations.

- 1 Press and hold **DISP SETUP** for over one second.
- 2 Rotate the DIAL to select “7 WIRES-X”.
- 3 Press **DISP SETUP**.
- 4 Rotate the DIAL to select “2 DG-ID”.
- 5 Press **DISP SETUP**.
- 6 Rotate the DIAL to select the DG-ID setting
01 to 99: Only nodes matching the set DG-ID number may be connected.
AUTO: Only open nodes, set to the DG-ID number “00” may be connected.
- 7 Press and hold **DISP SETUP** for over one second to save the setting and return to normal operation.



Copyright 2017
YAESU MUSEN CO., LTD.
All rights reserved.

No portion of this manual may be
reproduced without the permission of
YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.

Tennozu Parkside Building
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.