



STANDARD HORIZON

MATRIX SERIES

GX2000 and GX2100


Owner's Manual Errata Sheet

Page 47: 11.2.2 Programming the MMSI

WARNING

A user MMSI can be inputted only once. Therefore **please be careful not to input the incorrect MMSI number.** If you needs to change the MMSI number after it has been entered, the radio will have to be returned to Factory Service. Refer to the section “**15.2. FACTORY SERVICE.**”

1. Press and hold down the [CALL(MENU)] key until the “**Setup Menu**” appears.
2. Rotate the **CHANNEL** knob to select “**MMSI SETUP**”.
3. Press the [SELECT] soft key. (To cancel, press the [ENT] soft key.)
4. Rotate the **CHANNEL** knob to select the first number of your MMSI, then press the [ENT] soft key to step to the next number.
5. Repeat step 4 to set your MMSI number (nine digits).
6. If a mistake was made entering in the MMSI number, press the [BACK] soft key until the number is selected, then rotate the **CHANNEL** knob to correct the entry.
7. When finished programming the MMSI number, press and hold the [ENT] soft key. The radio will ask you to input the MMSI number again. Use steps 4 - 6 above.
8. After the second number has been input, press the **CHANNEL** knob to store the MMSI.
9. Press the [OK] soft key to return to radio operation.

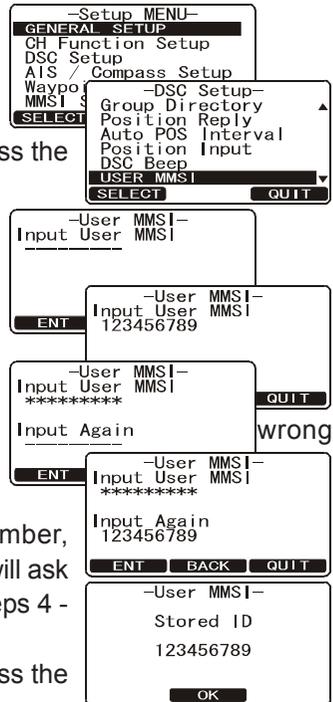

NOTE

To view your MMSI after programming to ensure it is correct, perform steps 1~3. Look that the MMSI number shown on the display is correct.

We apologize for your inconvenience.